

# Cricket Addendum – basic Diagram

High and Low Beam

WIPER ON / OFF

RIGHT DOT = HEADLIGHT OFF  
MIDDLE ICON = Parking light  
LEFT ICON = Regular Lights

WASHER / WATER release

D = DRIVE MODE  
N = Neutral (free wheel)  
R = REVERSE MODE  
\*activates reverse camera

Indicators (LEFT) and (RIGHT)

Engine START STOP button

Aircon –  
AC – to activate Air Con  
\*you will need to turn on fan to feel Aircon  
  
Small / Big Fan – turns airflow on so your Aircon works.



Horn

FOG Lights

Hazard Lights

Speeds: SLOW / MEDIUM / FAST  
1. If ECO is pressed in, you are on SLOW speed. **You should be on this speed on footpaths.**  
2. If ECO or SPORT are NOT pressed in, you are on MEDIUM speed.  
3. IF SPORT is pressed in, you are on FAST speed.

Heater / Demister  
*\*comes out from front area (behind camera)*

# Cricket Addendum – basic Diagram

## BASIC START UP POINTS:

1. To Turn device on, press and hold one of the HAND BRAKES, and then press and hold the circular button called “ENGINE START STOP” at the same time. The device will turn on.
  
2. To LOCK the device and ensure it doesn't move, don't forget to pull the PARKING BRAKE LEVER up. The PARKING BRAKE is located on the RIGHT side of your seat.
  
3. To DRIVE
  - a. Turn your machine on by following the above STEP 1.
  - b. Ensure the PARKING BRAKE is down. Be prepared to grab the hand brakes if you are on an incline, as now you have released the brakes.
  - c. Now that you have released the PARKING BRAKE, and your machine is on, on the RIGHT SIDE your driving knob needs to be on “D” for driving.
    - i. N is for Neutral (if you want to PUSH it)
    - ii. R is for REVERSE
  
4. To Turn the device off, press the “ENGINE START STOP” button. DON'T FORGET to put your PARKING BRAKE on, and to LOCK your DOORS with your keys, and take the keys with you!